




**7" Portable Handheld TV**

**AXN-8701**

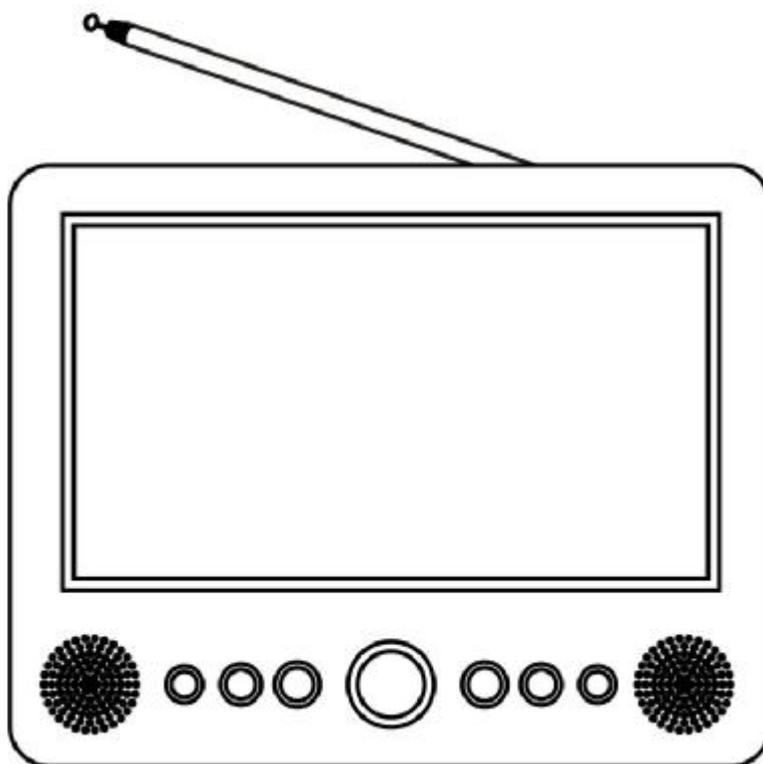

**Owner's Manual**

# Contents

<b>Cautions and Warnings.....</b>	<b>2</b>
<b>What's included.....</b>	<b>3</b>
<b>Powering and installation.....</b>	<b>3</b>
<b>Controls, Indicators, and Connectors.....</b>	<b>4</b>
<b>Settings Menu.....</b>	<b>6</b>
<b>Setting Up Channels.....</b>	<b>7</b>
<b>Setting the ATV/ DTV.....</b>	<b>7</b>
<b>Using External Antenna.....</b>	<b>7</b>
<b>Using Your TV as a Monitor.....</b>	<b>8</b>
<b>Using Headphone (not supplied).....</b>	<b>8</b>
<b>Specifications.....</b>	<b>9</b>
<b>Troubleshooting.....</b>	<b>9</b>

## **Cautions and Warnings**

### **1. Placement**

To prevent fire or electric shock, do not expose this appliance to rain or moisture. Do not place the set on an unstable cart, stand, tripod, bracket or table to prevent it from falling. Keep the unit away from strong magnets, heat sources, direct sunlight, excessive dust. If the unit is brought directly from a cold to a warm location, moisture may condense inside the unit. When you move it from a cold to a warm location, wait for about one hour before operating the unit, or leave the unit turned on until the moisture evaporates.

### **2. Installation**

Ensure that 7" the portable TV are installed in accordance with the instructions and illustrations provided in this manual.

### **3. Caution**

Do not push objects of any kind into the unit through openings; do not spill or spray liquid of any kind on or in the system (this may result in a fire or electric shock). Do not place anything heavy on the unit. To ensure proper ventilation and proper operation, never cover or block the slots and openings with a cloth or other material. Keep the unit away from an open flame such as fire, candle etc. It is hazardous to replace the battery incorrectly. Replace the battery only with the same or equivalent type, in order to protect the environment, please dispose the battery properly. Do not use the unit in temperatures higher than 95 degrees Fahrenheit or 35 degrees Celsius.

### **4. Disassemble**

Do not attempt to disassemble the cabinet. There is a risk of electric shock and/or exposure to Laser Radiation. Contact qualified service personnel if your system needs repair.

### **5. Cleaning Unit**

When cleaning, make sure the system is unplugged from the power source. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the system only.

## What's included

- I 7" Portable TV
- I Remote Control with Battery
- I AV Cable
- I AC to DC Adapter
- I Instruction Manual
- I Car Cigarette Lighter Adapter
- I External Antenna Cord
- I L Shaped Connector

## Powering and installation

### 1. Powering the system indoors

Plug one end of the AC to DC adapter into the DC Input jack on the right side of the mobile TV , then plug the other end into the 100~240V AC power receptacle.

**Note:**

*Use the provided AC to DC adapter or an adapter with proper specifications.*

### 2. Powering the system with built-in battery

A built-in rechargeable battery (Li-Polymer) is included for use. When the built-in battery can not power the TV or is used for the first time, recharge it.


- 1) Turn off the TV.
- 2) Connect the AC to DC adapter to the DC jack and a standard wall outlet. The red charge indicator will light. Once fully recharged, the light will turn off.
- 3) Disconnect the AC to DC adapter after the battery is fully charged.

**Note:**

*The TV can operate 100 minutes with built-in battery. When the sound level lowers or the picture becomes unstable, charge the battery about 4 hours.  
The battery will not be charged with the car cigarette lighter adapter.*

# Controls, Indicators, and Connectors

## Unit View

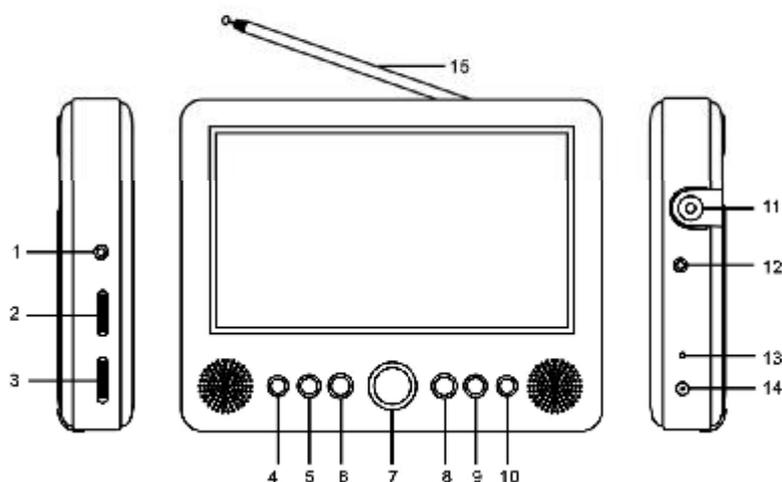


- 1) **Earphone** jack: Insert earphone (not included) for private listening. The speaker mutes.
- 2) **Volume Up/Down** Control: Adjust the volume.
- 3) **Brightness Up/Down** Control: Adjust the brightness.
- 4) **IR Sensor**: Infrared sensor receives information from remote.
- 5) **POWER on/off** button.
- 6) **MENU** button: Open and close TV menu.
- 7) **Up/Down/Left/Right** buttons: Used to highlight.  
**CH+/-**: Select the previous or next channel.
- 8) **ENTER** button: Confirm your selection.
- 9) **INPUT** button: Switch between TV and AV IN.
- 10) **WIDE** button: Switches the screen between the 16:9 and 4:3 screen displays.
- 11) **RF IN**: Connect with antenna.
- 12) **AV IN**: Connect with AV device.
- 13) **POW/CHG LED**: Lights green when the TV on and lights red when the built-in battery is charging.
- 14) **DC 9V**: Connect to the provided AC to DC adapter.
- 15) **Antenna Rod**: Extend and adjust for better reception.

### Notes:

- . Moving the TV may cause signal loss, especially for digital programming.
- . The TV will shut off automatically if it receives no signal for 15 minutes.

## Remote Control

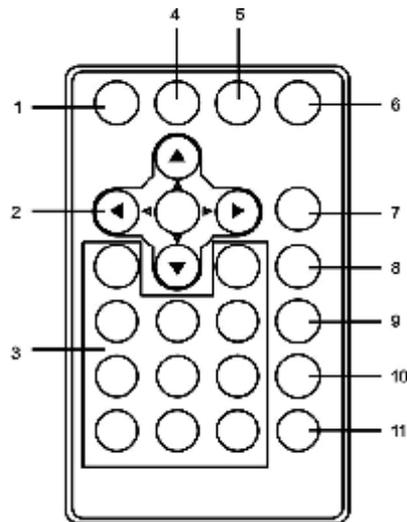

- 1) **MENU** button: Open the TV menu.
- 2) **Direction/ ENTER** buttons: Navigate on-screen menus and confirm your selection.
- 3) **NUMBER keys**: Use to select channels.
- 4) **AUTO** button: Search for channels automatically.
- 5) **DISPLAY** button: Press to display channel information.
- 6) **GUIDE** button: Display the list of available channels and the corresponding channel information.
- 7) **INPUT** button: Switch between TV and AV IN.
- 8) **MUTE** button: Press to stop the voice outputting.
- 9) **AUDIO** button: Select one of the audio soundtracks.
- 10) **CH+**: Selects next channel.
- 11) **CH-**: Selects previous channel.

## Settings Menu

1. To access the setting menu, press MENU button.
2. Using the Left or Right button, select an option and press ENTER to confirm.
3. Always press MENU button to exit.

### CLOCK

**OSD Duration:** Using the Left/Right button to select the duration of the on-screen display.

**Sleep Timer:** The TV turns of if inactive for amount of time.

**Time zone (DTV only):** Using the Left/Right button to select different time zone.

**Day saving Time (DTV only):** On or Off.

### SETUP

**Language:** Using the Left/Right button to select different Language.

**Transparent:** Using the Left/Right button to select on/off.

**Closed Caption:** You can select the Caption ON/OFF for the TV Program.

**Zoom Mode:** switch among Auto, Wide, zoom, cinema.

**Restore Setting:** Restores the factory setting.

### CHANNEL SETUP (only on TV)

**Antenna:** switch between air and CATV.

**Auto Scan:** Scans for channels to save to memory. Erases previously saved channel information.

**Auto Scan Add CH:** Scans for channels to save to memory, but does not erase previously saved channel information.

**Channel Skip:** Skip the channel you don't wanted.

**Channel NO:** Switch the channel.

**Channel Label:** Lets you edit the program label that appears when a channel is selected. DTV automatically adds this information. You can manually edit it for ATV.

## Setting Up Channels

You must scan for available analog and digital channels when you set up your TV. If you do not scan for channels, the Channel Up and Down buttons will not function.

To scan for channels:

1. Turn on your TV and set the input to TV.
2. Press MENU. The Menu screen appears.
3. Press the ► button twice to access the Channel Setup menu.
4. Use Up or Down button to select **Auto Scan**, and press ENTER button to confirm. Then select **Start to Scan**, the TV starts to scan for available channels. You can interrupt the scan by pressing and holding MENU on the TV.
5. When the scan is complete, you can adjust the antenna, select **Auto Scan Add CH** to add more channels to those scanned.
6. Press MENU again to exit the setting menu.

## Setting the ATV/DTV

### To set the ATV

Enter the channel number followed by “-0.” For example, enter “11-0” for the analog channel 11. If available, the analog channel appears.

### To set the DTV

Enter the channel number followed by “-1.” For example, enter “11-1” for the digital channel 11. If available, the digital channel appears.

Some digital stations provide multiple broadcasts on a single channel. To access these directly, enter higher numbers after the channel number. Take “11-2” “11-3” for example. If available, these digital channels appear.

## Using External Antenna

When the picture is not clear with the built-in rod antenna, try placing your TV near a window or connecting an external antenna to the TV for improve reception.

If you are in a weak TV signal area, or are inside a concrete building, you might need an external antenna to improve reception. Connect the external antenna to the RF IN jack on the right side of the TV.

## Using Your TV as a Monitor

1. Firstly, Press INPUT button to choose AV IN mode.
2. Connect the AV Cable's plugs to the out jack of AV Device as below:
  - Yellow plug: Connect to the VIDEO OUT jack on the AV Device.
  - Red plug: Connect to the AUDIO IN R jack on the AV Device.
  - White plug: Connect to the AUDIO IN L jack on the AV Device.
3. Finally, Connect the AV cable's 1/8-inch plug to the **AV IN** jack on the TV unit.

## Using Headphone (not supplied)

For private listening, you can connect an optional headphone with a 1/8-inch plug to the Headphone jack on the left side of the TV. This automatically mutes the built-in speakers.

### *Listening Safely*

To protect your hearing, follow these guidelines when you use headphones.

- . Set the volume to the lowest setting before you begin listening. After you begin listening, adjust the volume to a comfortable level.
- . Do not listen at extremely high volume levels. Extended high-volume listening can lead to permanent hearing loss.
- . Once you set the volume, do not increase it. Over time, your ears adapt to the volume level. So a volume level that does not cause discomfort might still damage your hearing.

## Specifications

Signal system	NTSC
Panel size	7 inch
Power source	DC 9V
Operating temperature	5~35°C
Weight	0.588 kg
Dimensions (W x D x H)	7.3 X 5.8 X 1.3 inch 185 x 147 x 32 mm

## Troubleshooting

### The player won't turn on?

1. Charge the battery.
2. Check the AC to DC adapter is connected.
3. Connect to another power outlet.

### No sound?

1. Turn up the volume.
2. Press MUTE on the remote control to turn off mute.
3. Unplug the earphones.

### Poor picture?

1. Adjust the telescoping antenna.
2. Move to a window (if inside a structure).
3. Use an external antenna.

### Remote control doesn't work?

1. Remove any obstacles between the remote and the TV.
2. Replace the battery in the remote control.

## **America Action, Inc. (“AXN”) Product Warranty Information**

### **What the warranty covers:**

America Action, Inc. (“AXN”) warrants your AXN products against defects in material and workmanship during the warranty period from the original date of purchase, subject to the following terms and conditions. If a product proves to be defective in material or workmanship during the warranty period, AXN will, at its discretion, repair or replace the product with a similar product provided the purchaser adheres to certain return authorization procedures and guidelines.

### **How long the warranty is effective:**

AXN products are warranted for one (1) year for parts and ninety (90) days for labor, starting from the original date of purchase/invoice.

### **What brand(s) can be covered under the warranty:**

Any “ACTION” and “AXION” branded products sold by America Action, Inc.

### **Whom the warranty protects:**

This warranty is valid only for the original purchaser within the continental of USA.

### **What the warranty does not cover:**

1. Any product on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
  - A. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
  - B. Repair or attempted repair by anyone not authorized by AXN.
  - C. Any damage of the product due to shipment.
  - D. Removal from or installation to the product.
  - E. Causes external to the product, such as electric power fluctuations or failure.
  - F. Use of supplies or parts not meeting AXN's specifications.
  - G. Normal wear and tear.
  - H. Battery Leakage.
  - I. Any other cause which does not relate to a product defect.
3. Cosmetic damage by purchaser, such as markings, discoloration, scratches, dents, gouges or any other defacement.
4. Physically damaged products by purchaser, such as broken PCB, Housing, damaged LCD Module.
5. No Defect Found (product returned to AXN as defective but failure is not duplicated by AXN's test method).
6. Customer instruction, installation, set up adjustments, or signal reception problems.
7. Rechargeable batteries.
8. Product without proof of purchase. (The proof of purchase should be one of the following documents: purchase receipt, gift receipt, sales invoice, and packing list that contains the product model number, price, vendor, and purchase date.)
9. Ninety (90) days after the original purchase date of the AXN product, the customer is responsible for the shipping fees incurred for the product delivery to and from AXN service center.

**How to get service:**

1. For additional information on obtaining an extended warranty service, contact your AXN dealer or AXN's Customer Service Department by e-mailing to [customerservice@axionzone.com](mailto:customerservice@axionzone.com).

To obtain warranty service, you will be required to do one of the following: fill out an online [RMA Request Form](#), print the form, fill it out and fax it to 1-909-869-5545, or call AXN's Customer Service number at 1-909-869-6600. You will be asked to provide the following information:

- A. Customer information (name, day-time phone number, and/or residential address).
  - B. Proof of your purchase (purchase receipt, gift receipt, sales invoice, and/or packing list).
  - C. Product model number.
  - D. Product serial number.
  - E. A description of the problem.
  - F. Payment information (If any payment is required, you will be asked to provide this information beforehand. Currently, we only accept personal check, money order or cashier's check. The time for us to clear a personal check is approximately 20 days; 10 days for any money order or cashier's check.
2. AXN will contact the customer upon receipt of the RMA Request Form, and will issue an RMA number if the RMA Request Form is completed and delivered as requested.
3. Please take or ship RMA product to AXN or any AXN authorized service center with RMA number clearly and marked on the outside of the packing. All RMA products should be returned in secured packaging, preferably in the original package, with the complete set of accessories. We recommend that you insure the package in case of loss or damage during shipping.
4. Upon receiving the RMA product, if the correct RMA number is clearly marked on the packaging, and if the repair payment is pre-paid or is enclosed with the package, depending on the condition of the defects, AXN will repair or replace all RMA products, and ship the product back to the customer.
5. For additional information or the name of the nearest AXN service center, please contact your AXN dealer or AXN Customer Service.

**Before contacting us:**

In many cases, your product may not need repair. Before contacting us, please consult the troubleshooting section in your user's guide or AXN's FAQ webs page to see if you can easily remedy the problem yourself.

**AXN technical support services:**

During the period of product warranty, we support your basic configuration, setup and troubleshooting questions; and when necessary, we will provide you with all the instructions on how to return your product for repair.

For customer service and support inquiries, please call 1-909-869-6600 or e-mail us at [customerservice@axionzone.com](mailto:customerservice@axionzone.com).

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. AXN SHALL NOT BE LIABLE FOR ANY

INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

AMERICA ACTION INC.  
100 EXCHANGE PL  
POMONA, CA 91768  
PH: (909) 869-6600  
FAX: (909) 869-5545

[CONTACTUS@AXIONZONE.COM](mailto:CONTACTUS@AXIONZONE.COM)  
[HTTP://WWW.AXIONZONE.COM](http://WWW.AXIONZONE.COM)